Insulated Siding Split Block
Installation Instructions

-To be installed prior to siding-

Step 1
Remove the Trim Ring from the Split Block. Fasten the bottom of the Split Block in the desired location. See Figure 1 below.

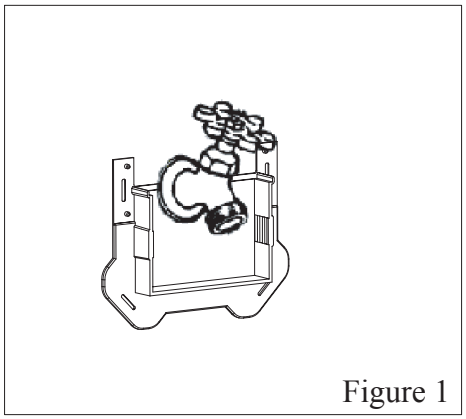

Figure 1

Step 2
Reassemble the top to the bottom and fasten it into place. See Figure 2 below.

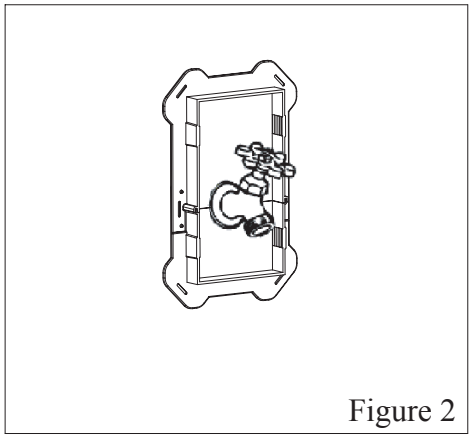

Figure 2

Step 3
Cut the siding around the Split Block. Install the siding according to the manufacturer's intallation instructions. See Figure 3 below.

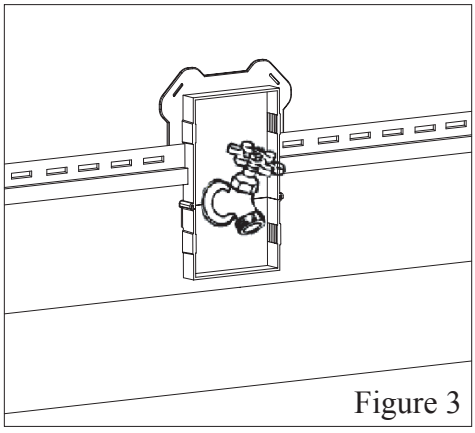

Figure 3

Step 4
Install the Trim Ring by locking it into place. It may be necessary to cut the ring along the v-groove on the back of the part to prevent interference. See Figure 4 below.

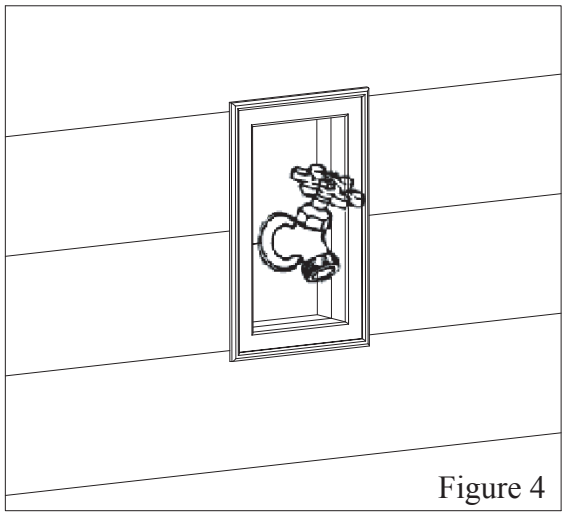

Figure 4

Note
The Extension Ring is provided for thicker siding applications allowing material thickness up to 1 5/8". The Trim Ring will accomodate thicknesses of 3/4", 1", and 1 1/4". See Figure 5 below.

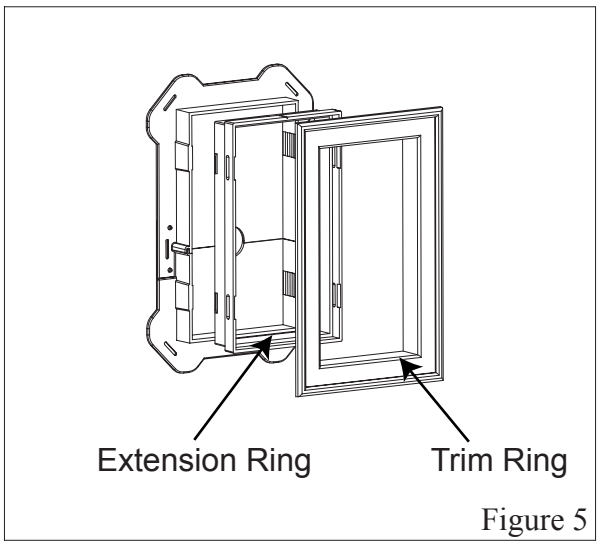

Figure 5

I-0138
PC10553
5-31-07